



Honda CBR600RR 07-11
Fender Eliminator Kit
P/N: 670-3310

Kit Contents

Part Number	Description	Quantity	Part Number	Description	Quantity
99-FE-670-3310	1 Pc. Bracket	1	99-Wash6X15	6x15mm Washer	2
99-LN-5	5MM Lock Nuts	2	99-Wash6X12	6x12mm Washer	2
99-HB-6X12	6X12 Bolt	2	99-LN-6	6mm Lock nut	2

Use blue thread locker to secure bolts. Refer to owner's manual for proper torques.

1. Remove rider and rear seats.
2. Remove rear Bodywork by removing (4) bolts under rear seat.
3. Disconnect brake and marker light wires.
4. Remove rear fender brackets by removing (2) hex head bolts on each side. (Fig 1 #1) Unclamp wires from wire clamp under left side bracket.
5. Remove (2) nuts holding on the brake light. Pull lens straight out from bracket.
6. Remove marker light nuts and take marker lights off bracket.
7. Assemble brake light and "DMP Fender Eliminator" kit. Tighten with (2) 6MM nuts.(Fig 2)
8. Re-install marker lights to fender brackets; check that they are on the correct side.
9. Install and tighten right side fender bracket.
10. Loosely install "DMP Fender Eliminator" and brake light to right bracket using stock 5MM x 15 bolt and supplied 5MM lock nut. (Fig1 #2)
11. Run wires through left side Fender Bracket using factory clips. Loosely install left side Fender Bracket. Caution: route wire secure and away from the exhaust pipe.
12. Install "DMP Fender Eliminator" on left side bracket with factory wire clip, 5MM bolt and 5MM provided lock nut.
13. Tighten "DMP Fender Eliminator" and side fender brackets.
14. Reconnect lights.
15. Install rear Bodywork and seats.
16. Remaining hardware to be used for mounting license plate.

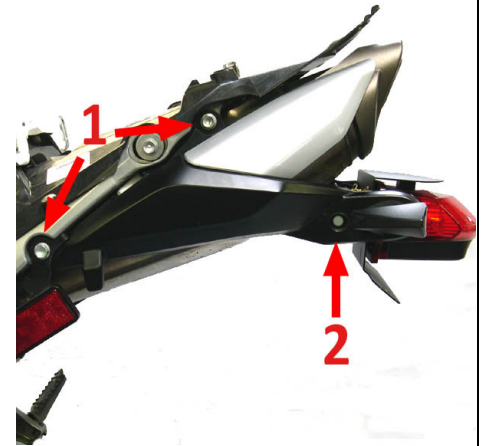


Fig 1

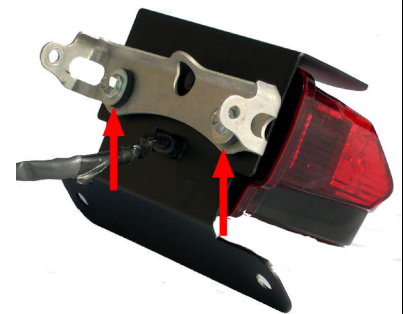


Fig 2

Note: To complete your installation we recommend using DMP Marker Lights and DMP OEM Type Wire Harness, which are available from your local DMP dealer or www.moto911.com.
Pictures for reference only. Bike shown is CBR600RR 2007.